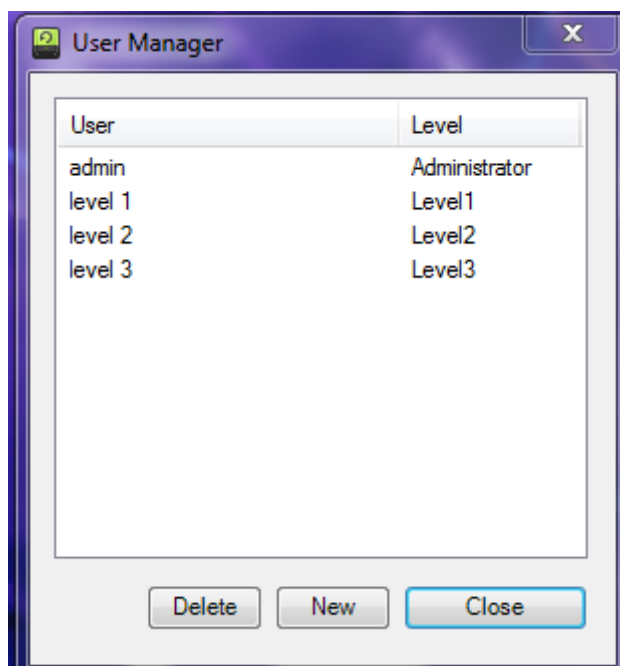

SSD Ltd Restore / Backup GUI with login permissions

Note the following is not set. Customers are able to configure their own permission levels.

This document is presented as an example of the options available.

Within "ADMIN", the following users can be set up



Level 1: (Operator)

An operator only needs basic access & is not required to change the drive configuration, operation or data.

- ONLY allow access to saved drives
- NOT allow changes to the implementation of the emulation
- NOT allow changes to the data
- NOT allow access to the Images for security purposes

Enabled

- Connect to existing saved drives only
- Backup ONLY so the data cannot be changed
- Take Online / offline (as required to perform a backup anyway)

Disabled

- Cannot connect to drives that are NOT in the saved list
- Cannot create new saved drives
- Cannot change the write protect of the drive
- Cannot restore
- Cannot change the size
- Cannot change the emulation mode
- Cannot access the Image Manager
- Cannot manager users



Level 2 (Engineer)

An engineering needs Operator access plus the ability to manage the data sets.

This includes Level 1 (Operator) control with the following changes:

Enabled

- Backup
- Restore from Backup



Level 3 (Supervisor)

A supervisor needs engineer access plus the ability to configure, install & process data images.

This includes Level 2 (Engineer) control with the following changes:

Enabled

- Connect to new drives
- Create to saved drives
- write protection control
- Change emulation mode
- Change size
- Change network settings
- Image Manager



Administrator

The administrator has unrestricted control.

This includes Level 3 (Supervisor) control with the following changes:

Enabled

- Manager Users

